



NEEDLE SCALER NRV-95A

1. Front	N-95-01	15. Throttle	H-95-15
2. Spring	N-95-02	17. Ball	S-100-17
3. Needle Holder	N-95-03	18. Cylinder	H-90-18
4. Spacer	N-95-04	19. Retainer	S-100-19
5. Housing	N-95-05	21. Valve Steam	F-110-21
6. Support Ring	N-95-06	22. Piston Ring	S-100-22
8. Driver	N-95-08	25. O-ring (2)	S-100-25
9. Spring	S-100-09	26. Valve Spring	F-110-26
12. Piston	S-100-12	27. Pin	S-100-27
13. Piston Ring	S-100-13	28. Rear	N-95-28
14. Limit Ring	H-90-14		